


HOW TO CHANGE RF CHANNELS

HOW TO CHANGE RF CHANNELS (VDS-3000 RF /VDS-1500 RF /XM-5000 RF)

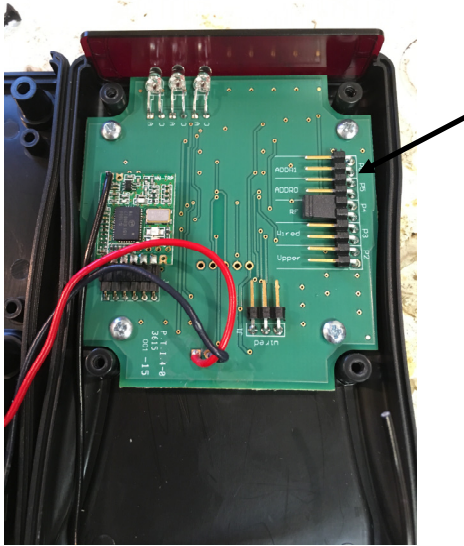

RF REMOTE CONTROL

(XM-5000 RF VDS-1500 RF VDS-3000 RF)


PLACE JUMPER ON THE PINS MARKED AS BELOW ON BOTH TRANSMITTER AND RECEIVER TO OPERATE ON SECONDARY CHANNELS (UP TO 4)

FOUR CHANNELS

NO JUMPER=CH 1

ADDR 01= CH 2

ADDR 02=CH 3

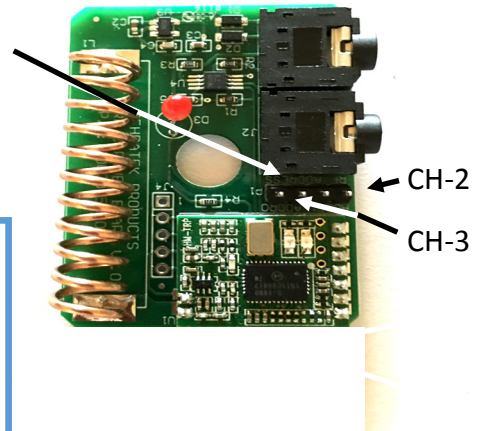

RF RECEIVER MODULE

(XM-5000 RF VDS-1500 RF VDS-3000 RF)

NOTE: Always power cycle the remote and VRA boxes after changing channels.

PEHRATEK PRODUCTS
9285 Pierson Lake Drive
Chaska, MN 55318
866 470-3532