PEHRATEK WIRELESS VIDEO VRA VDS-1000 RF



OPERATOR'S MANUAL













DUAL-ARM
Mounting Brackets

Power Pack

REMOTE CONTROL

BUTTON 1=LEFT (Blue Dot)
BUTTON 2=RIGHT (Red Dot)
BUTTON 3=CENTER BOX
BUTTON 4=CENTER BOX TWO

Power Pack

DUAL-ARM Mounting Brackets

INSTALLATION INSTRUCTIONS

- 1.) Position VIDEO VRA near sound field loudspeakers using table-top mount, rolling cart, or wall mounting brackets. Assure each panel's secure mounting to the wall or sound field speakers. Right/left assignment is indicated by a red=right dot in upper corner.
- 2.) Route power pack power cords to nearest AC outlet. Secure cords to wall using Installation Kit (optional)
- 3.) Elongate RF antennas on back of RF module and position them away from metal objects and sound room walls.
- 4.) Test wireless remote control to assure proper activation and RIGHT/LEFT assignment.




SMALL THIN REMOTE

(See separate instruction sheet on using this remote control Enclosed)

Used only to control:

Brightness Contrast Volume

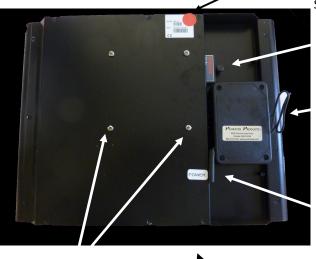

RIGHT/LEFT Designator Color (RED=RIGHT)

Serial Number

Firmware memory card

RF Module

Elongate antenna wire fully and position away from metal surfaces

DC power plug input 12 Volts

Mounting Scraws

Loudspeaker

PEHRATEK PRODUCTS 9285 Pierson Lake Drive, Chaska, MN 55318 (952) 470-9063 www.pehratek.com

TROUBLESHOOTING

PROBLEM

Display Flickers

POSSIBLE CAUSE/REMEDY_

Display will not light up	Check power connections, look for glowing green LED on side panel, make sure outlet is live		
Activates intermittently	Make sure that the antennas are outstretched and positioned away from metal objects.		
No images are shown	Check that the file counter (behind RF module) is set to #9.		
Images are distorted	Unplug unit from outlet for 3 minutes, restart system, Remove & reinsert memory card		

Replace batteries in the remote control. (CR-2016) Requires two batteries.

SOUND OPTION

Sounds associated with each video clip will play when the RIGHT/ LEFT button is pressed. Use the small thin remote control to adjust volume or mute settings.

TO PAIR REMOTE WITH VIDEO MONITOR PANEL

- 1) Remove top plate to RF module (4 screws)
- 2) Locate push button at the top of the PC board.
- 3) Hold button down for 3 seconds or more until green LED flashes.
- 4) While the LED is flashing press the button on the remote control to be paired with monitor. The LED will flash once and then go out and exit the pairing mode in 15 seconds.

<u>To clear channel memory:</u> Hold top button down for 3 seconds or more until the LED flashes. Release and hold down again for 3 seconds or more until the LED stops flashing. The LED will flash twice to indicate that all codes have been deleted.



PEHRATEK PRODUCTS 9285 Pierson Lake Drive Chaska, MN 55318 [952) 470-9063 www.pehratek.com

