

VIDEO VRA MONITOR REMOTE CONTROL


INTERNAL MONITOR ADJUSTMENTS

POWER-Turns unit ON/OFF
(Hold close to front panel IR
sensor to activate)
BETTER TO UNPLUG
POWER TO RESET

DISPLAY-Shows current
file information. Press
again to dismiss.

THIS INTERNAL REMOTE IS
TO BE USED ONLY WHEN
TROUBLESHOOTING THE
VIDEO VRA SYSTEM.

BUTTONS NOT IDENTIFIED
ARE NOT TO BE USED
WITH THIS PRODUCT

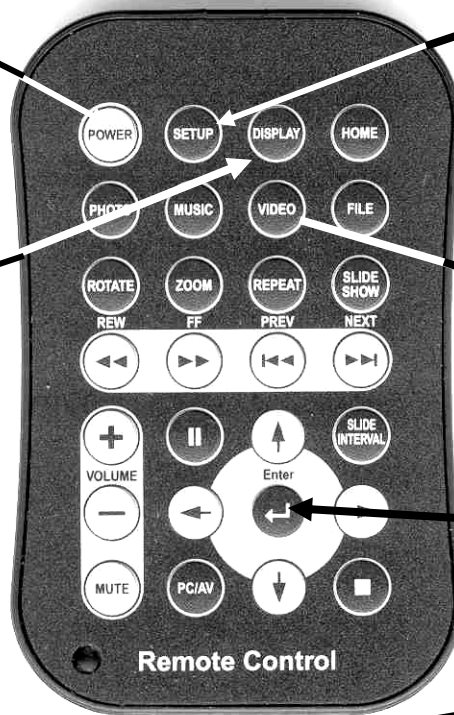

SETUP-menu of settings
(Select MOVIE then EXIT)

VIDEO-Select when in
the Set Up screen

ENTER

**PULL OUR BATTERY TAB
TO ACTIVATE REMOTE
CONTROL**

PULL THIS TAB

TROUBLE SHOOTING VIDEO VRA

Most situations can be resolved quickly by powering down the video display for 3 minutes and powering the system back up again. Internal software is programmed to auto-setup the system for video playback without touching any controls on the monitor or the remote control (except to use the other remote (supplied) to activate LEFT/RIGHT/CENTER displays for testing.)

If technical difficulties continue-try removing the memory card on the back of each monitor (first removing the retention screw) and gently pulling out the memory card from the side of the monitor. Reinsert the memory card gently with even force as not to bend the contacts inside the receptacle and power up the system giving it 4-5 minutes to reboot the auto-software.

If the display shows four boxes PHOTO MUSIC VIDEO FILE select VIDEO and enter to continue operation.

PEHRATEK PRODUCTS
9285 Pierson Lake Drive
Chaska, MN 55318
(952) 470-9063